



No.	PARTSNAME	No.	PARTSNAME	No.	PARTSNAME
1	Wrench	48	Sound silce	80	Reel foot
2	Handle knob	49	Lever hob cover	81	Stopping bracket screw
4	Handle knob screw	50	Right side support plate	82	Stopping bracket
5	Handle shaft retainer	51	Drag tension knob	83	Anti reverse dog
6	T handlenail	52	Cover screw	84	Ball bearing
7	Handle shaft washer	53	Soundnail	85	Left side plate
8	Handle shaft coat	54	"E" washer	86	Side plate screws
9	Ball bearing	55	Dial washer	87	Drive shield
10	Handle arm	56	Side plate screws	88	Thrust washer
11	Handle knob screw	57	Limited nail	89	Drive shaft washer
12	Alarmsupport	58	Limited spring	90	Drive shaft
13	Alarm lever screw	60	Limited bushing	93	Spool washer
14	Alarm spring	61	Close cover screw	94	Spool drag screw
15	Alarm hammer	62	Close cover	95	Alarm sound slice
16	Holder nut	63	Pre-program plate washer	96	Spool shaft spring
17	Drive shaft cover	64	Eccentric	97	Spool spring washer
18	Drive shaft coat washer	65	Pre-program screw	98	Ball bearing
19	Ball bearing	66	Right side cover	99	Spool
20	Drive gear-high speed	67	Limited button	100	Ball bearing
23	Drive shaft	68	Limited button spring	101	Spool washer
25	Drive shaft screw	69	Limited button cover	102	Spool drag screw
30	Drag control lever washer(B)	70	Limited button screw	103	Drag washer
31	Drag control lever	71	Pre-program key	104	Pressure plate
32	Drag control lever thrust ring	72	Ball bearing	105	Spring for silence
33	Alarm lever crosspinsuffort	73	Haness lugs screw	106	Rod clamp
34	Alarm lever	74	Harness lugs	107	Fixed screw
36	Push slice screw	75	Frame	108	Handle shaft coat washer
44	Handle bolt	76	Anti-reverse ratchet	109	Drive shaft washer
46	Handle bolt washer	77	Sound plate screw		
47	Soundnail spring	79	Reel foot screws		